


810 - Area File

Thursday, April 14, 2022 11:01 AM

Creating the Area File

The area file will be created as a separate file to help manage file size and also because Right-of-Way is the only area that uses this information.

Create a new file, select template Design-Start.dwt.

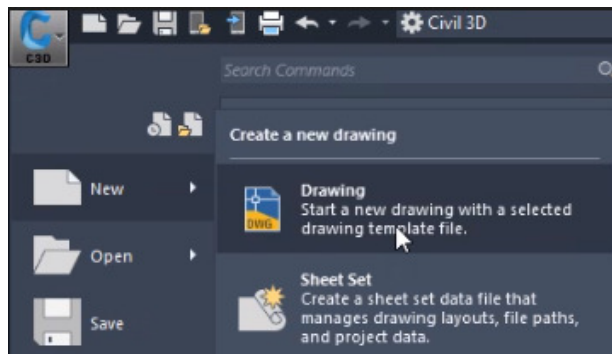

Save as XXXXXXXROARE001.dwg in the RO folder of the project. Create a layer called X-XREF, set as current, and reference in the ROMAP and SUCAD files. Insert/Reference/Attach - browse to the file, select, and hit Open. In the window that pops up the Reference Type is Overlay, Scale for X, Y, and Z is set to 1.

Freeze any information (PC/PT Stations, Monuments, Labels, Text, Ownership Dots, etc...) that is not needed by selecting Freeze from the Layers ribbon of the Home Tab. (can we get a layer state for this? Will wait until we have the correct layers to create)
Add this to trello card for layer states - Beth will send a list of desired layer states.

Areas can be created manually or by creating a parcel.